

1969 THRU 1974

MODEL
310
AND
TURBO
310
SERIES


PARTS
CATALOG

This reprint of the basic Parts Catalog P497-12 dated September 1973, incorporates Change 1 dated February 1974 and Change 2 dated May 1974.

1969	1970-1974
310P T310P	310Q T310Q

CESSNA AIRCRAFT COMPANY • WICHITA , KANSAS

 SEPTEMBER 1973





PARTS CATALOG REVISIONS

PCR #76-29

REFERENCE CATALOG NUMBER: As Noted

DATE: 5-14-76

CATALOG TITLE: 310, Skyknight & 411 Parts Catalogs

TO: All Zones and Dealers

FROM: Customer Services Department

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE
CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
P251-12	254A	152	3A	0841000-101 Actuator Leaf	ADD "FS0 JE73"	310, 310B, 310C, 310D (Including Change 1) - 1955 thru 1960
P329-12	479	192	4	0841000-101	ADD "FS0 JE73"	310F, 310G, 310H, 310I, 310J, 310K (Including Change 1) - 1961 thru 1966
P447-12	2-331	137	4	JE-1	ADD "FS0 JE73"	310L & 310N (Including Change 1) 1967-1968
P497-12	2-542	186	4	JE-1	ADD "FS0 JE73"	310P & 310Q (Including Change 2) 1969 thru 1974
P301-12	500	202	4	0841000-101	ADD "FS0 JE73"	Skyknight - 1962 thru 1965
P390-12	2-373	154	12	JE-1	ADD "FS0 JE73"	Skyknight - 1966 thru 1968
P386-12	2-327	127	45	JE-1	ADD "FS0 JE73"	411 & 411A - 1965 thru 1968





PARTS CATALOG REVISIONS

CS #75-18

REFERENCE CATALOG NUMBER: As Noted

DATE: 8-29-75

CATALOG TITLE: 310, Skyknight & 411 Parts Catalogs (See Below)

TO: All Zones and Dealers

FROM: Customer Services Department

The attached Parts Catalog pages have been revised to detail the parts interchangeability between main landing gear fork bolts and torque tube assemblies. To eliminate shipments of incorrect parts, it is important to determine the aircraft's torque tube configuration before ordering fork bolts.

The attached pages are summarized below:

C. T.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
251-12	127	76	-	Present Page	Attached Page	310, 310B, 310C, 310D (Including Change 1) - 1955 thru 1960
329-12	185	75	-	Present Page	Attached Page	310F, 310G, 310H, 310I, 310J, 310K (Including Change 1) - 1961 thru 1966
447-12	2-183	75	-	Present Page	Attached Page	310L & 310N (Including Change 1) 1967-1968
497-12	2-295	97	-	Present Page	Attached Page	310P & 310Q (Including Change 2) 1969 thru 1974
301-12	191	83	-	Present Page	Attached Page	Skyknight - 1962 thru 1965
390-12	2-207	86	-	Present Page	Attached Page	Skyknight - 1966 thru 1968
386-12	2-169	64	-	Present Page	Attached Page	411 & 411A - 1965 thru 1968

CORRECTED PAGE INCORPORATED IN THIS REPRINT.



LIST OF EFFECTIVE PAGES

Page No.	Change No.	Page No.	Change No.	Page No.	Change No.
2-324	0	2-414 - 2-416	0	2-482 - 2-488	0
2-325 Blank	0	*2-417	2	*2-489	2
2-326	0	2-418	0	2-490	0
*2-327 - 2-329	2	*2-419 - 2-420	2	*2-491	2
2-330	0	2-421 Blank	0	2-492 - 2-493	0
2-331 Blank	0	2-422	0	*2-494	2
*2-332 - 2-333	2	*2-423 - 2-424	2	2-495 - 2-499	0
2-334	0	2-425 Blank	0	2-500	1
2-335 Blank	0	2-426	0	2-501	0
2-336	0	*2-427	2	2-502	1
*2-337	2	2-428	0	2-503	0
2-338	0	*2-429	2	*2-504	2
*2-339	2	2-430	1	*2-504A Blank Added	2
2-340	0	*2-431	2	*2-504B Added	2
*2-341 - 2-343	2	2-432	0	*2-505	2
2-344	0	*2-433	2	2-506	0
2-345 Blank	0	2-434	0	*2-507 - 2-509	2
*2-346 - 2-351	2	*2-435	2	2-510	0
2-352	0	2-436 - 2-439	1	2-511	1
2-353 Blank	0	2-440 - 2-443	0	2-512 - 2-516	0
*2-354 - 2-358	2	2-444	1	2-517	1
*2-358A Blank Added	2	2-444A	1	2-518 - 2-520	0
*2-358B Added	2	*2-444B	2	*2-521	2
*2-359	2	2-445	1	2-522	0
2-360 - 2-364	0	2-446	0	2-523 - 2-524	1
2-365	1	*2-447	2	*2-525 - 2-527	2
2-366	0	2-448	0	2-528	0
2-367	1	*2-449	2	*2-529	2
2-368 - 2-372	0	2-450	0	2-530 - 2-532	0
2-373	1	2-451	1	2-533 Blank	0
2-374	0	*2-452	2	2-534	0
2-375	1	2-453 Blank	0	2-535	1
*2-376 - 2-378	0	2-454	0	2-536 - 2-538	0
*2-379	2	2-455	1	*2-539 - 2-540	2
2-380	0	*2-456	2	2-541 Blank	0
2-381	1	2-457 Blank	0	2-542 - 2-543	1
*2-382	2	2-458 - 2-459	0	2-544 - 2-546	0
2-383 - 2-384	0	2-460	1	*2-547 - 2-549	2
2-385	1	*2-461	2	2-550	0
2-386 - 2-389	0	2-462	0	*2-551 - 2-553	2
*2-390 - 2-391	2	2-463	1	2-554	1
2-392 - 2-394	0	*2-464	2	2-555 - 2-556	0
*2-395 - 2-396	2	2-465 Blank	0	2-557	1
2-397 Blank	0	2-466 - 2-467	0	2-558 - 2-560	0
2-398	0	2-468	1	2-561 Blank	0
2-399	1	*2-469 - 2-470	2	2-562 - 2-564	0
2-400 - 2-402	0	2-471	1	2-565 Blank	0
2-403 - 2-404	1	*2-472 - 2-474	2	2-566 - 2-568	0
2-405 Blank	0	2-475 Blank	0	*2-569	2
2-406 - 2-410	0	*2-476 - 2-477	2	2-570 - 2-572	0
*2-411 - 2-412	2	2-478 - 2-480	0	*2-573	2
2-413 Blank	0	2-481 Blank	0	2-574 Blank	0

LIST OF EFFECTIVE PAGES

Page No.	Change No.
2-575 - 2-581	0
*2-582	2
2-583 - 2-588	0
2-589 Blank	0
2-590	0
*2-591	2
2-592 - 2-598	0
2-599	1
2-600 - 2-604	0
2-605 Blank	0
*2-606 - 2-610	2
2-611 Blank	0
*2-612 - 2-614	2
2-615 Blank	0
*2-616 - 2-620	2
*2-620A-2-620B Added	2
*2-621 Blank	2
*2-622 - 2-624	2
*2-625 Added	2
*2-626 Blank Added	2
3-1	0
*3-2 - 3-36	2
*3-37 Added	2
*3-38 Blank Added	2

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
A		A	
ACCUMULATOR ASSY-PROP UNFEATHERING	148	AUXILIARY FUEL DRAIN VALVE	159
ACTUATOR ASSY-AILERON TRIM TAB	119	AUXILIARY FUEL GAGE	88
ACTUATOR ASSY-ELEVATOR TRIM TAB	119	AUXILIARY FUEL GAGE TANK UNIT	158
ACTUATOR ASSY-PROP SYNC	147	AUXILIARY FUEL GAGE TANK UNIT	159
ACTUATOR ASSY-RUDDER TRIM TAB	119	AUXILIARY FUEL GAGE TANK UNIT-TURBOCHARGED	158
ACTUATOR GEAR BOX-GEAR	104	AUXILIARY FUEL GAGE TANK UNIT-TURBOCHARGED	159
ACTUATOR MOTOR GEAR	104	AUXILIARY FUEL HOSE	158
ACTUATOR REDUCTION-GEAR	104	AUXILIARY FUEL HOSE	159
ACTUATOR SHELF	212	AUXILIARY FUEL HOSE	160
ACTUATOR SHELF-NAV-O-MATIC 400A AUTOPILOT	213	AUXILIARY FUEL HOSE	161
ACTUATOR SHELF AND CABLES 400 AUTOPILOT	204	AUXILIARY FUEL LINES	158
ACTUATOR SHELF AND CABLES 400A AUTOPILOT	207	AUXILIARY FUEL LINES	159
ACTUATOR SWITCH-FLAP LIMIT	119	AUXILIARY FUEL LINES	160
ACTUATOR-GEAR HORN SWITCH	166	AUXILIARY FUEL LINES	161
ACTUATOR-LANDING GEAR	104	AUXILIARY FUEL STRAINER	158
ACTUATORS-LANDING GEAR SWITCHES	178	AUXILIARY FUEL STRAINER	159
ADAPTER ASSY-AUX FUEL DRAIN	158	AUXILIARY FUEL STRAINER	160
ADAPTER ASSY-HEATER Y	4	AUXILIARY FUEL STRAINER	161
ADAPTER-TANK UNIT AUX FUEL	158	AUXILIARY FUEL TANK UNIT ADAPTER	158
ADJUSTMENT MECHANISM INSTL-RECLINING SEAT	29	AUXILIARY FUEL TANK UNIT ADAPTER	159
AFT SECTION BOTTOM ASSY	29	AUXILIARY FUEL TANK UNIT ADAPTER	160
AFT SECTION BOTTOM ASSY	30	AUXILIARY FUEL TANK UNIT ADAPTER	161
AFT SECTION BULKHEADS	25	AUXILIARY FUEL VENT LINES	158
AFT SECTION BULKHEADS	26	AUXILIARY FUEL VENT LINES	159
AFT SECTION BULKHEADS	27	AUXILIARY FUEL VENT LINES	160
AFT SECTION BULKHEADS	28	AUXILIARY FUEL VENT LINES	161
AFT SECTION SKINS	25		
AFT SECTION SKINS	26		
AFT SECTION SKINS	27		
AFT SECTION SKINS	28		
AFT SECTION STRINGERS	25		
AFT SECTION STRINGERS	26		
AFT SECTION STRINGERS	27		
AFT SECTION STRINGERS	28		
AFT SECTION STRUCTURE-FUSELAGE	25		
AFT SECTION STRUCTURE-FUSELAGE	26		
AFT SECTION STRUCTURE-FUSELAGE	27		
AFT SECTION STRUCTURE-FUSELAGE	28		
AFT SECTION TAILCONE STRUCTURE ASSY	31		
AFT SINGLE SEAT INSTL-PASSENGER	83		
AFT SINGLE SEAT INSTL-PASSENGER	84		
AILERON BALANCE WEIGHTS	58		
AILERON CONTROL SYSTEM	110		
AILERON HINGE	47		
AILERON RIBS	58		
AILERON SKINS	58		
AILERON SPAR	58		
AILERON STRUCTURE	58		
AILERON TRIM CONTROL SYSTEM	116		
AILERON TRIM INDICATOR	116		
AILERON TRIM TAB ACTUATOR ASSY	119		
AILERON TRIM TAB ASSY	58		
AILERON TRIM WHEEL	116		
AIR CONTROL-ALTERNATE	140		
AIR INLET-CABIN HEATER	165		
AIR SPILL-CABIN VENT	170		
AIR-CABIN WEMACS	170		
AIRSPEED INDICATOR	88		
AIRSPEED INDICATOR	89		
ALTERNATE AIR CONTROL	140		
ALTERNATOR-ENGINE	130		
ALTERNATOR-ENGINE TURBOCHARGED	131		
ALTERNATORS-CIRCUIT BREAKER	183		
ALTIMETER	89		
ALTIMETER	89		
ALTIMETER-FEET AND MILIBAR	88		
ALTIMETER-FEET AND MILIBAR	89		
ALTITUDE CONTROL	207		
AMMETER	85		
AMMETER-PROP DEICE	88		
AMMETER-PRCP DEICE	89		
ANTENNAS	198		
ARM-HEATER	4		
ARMREST ASSY	64		
ARMREST ASSY	66		
ARRANGEMENTS INSTL SEATING	68		
ASH RECEIVER	66		
AUTOPILOT PLACARDS	113		
AUTOPILOT SERVOS & CABLES	203		
AUTOPILOT SERVO PANEL	204		
AUTOPILOT SUPPORT ASSY	25		
AUTOPILOT SUPPORT ASSY	26		
AUTOPILOT SYSTEM-NAV-O-MATIC 400A	213		
AUTOPILOT SYSTEM-NAV-O-MATIC 800	202		
AUXILIARY FUEL CAP PLACARD	1		
AUXILIARY FUEL CELLS	158		
AUXILIARY FUEL CELLS	159		
AUXILIARY FUEL DRAIN ADAPTER ASSY	158		
AUXILIARY FUEL DRAIN ADAPTER ASSY	159		
AUXILIARY FUEL DRAIN VALVE	158		
		B	
		BAFFLE ASSYS-COWL	123
		BAFFLES INSTL-ENGINE	134
		BAFFLES INSTL-TURBOCHARGED ENGINE	135
		BAGGAGE COMPARTMENT STRUCTURE-NACELLE	54
		BAGGAGE COMPARTMENT STRUCTURE-NACELLE	55
		BAGGAGE DOOR	36
		BAGGAGE DOOR	37
		BAGGAGE DOOR HINGE ASSY	36
		BAGGAGE DOOR HINGE ASSY	36
		BAGGAGE DOOR JAMBS	35
		BAGGAGE DOOR JAMBS	36
		BAGGAGE DOOR JAMBS	37
		BAGGAGE DOOR JAMBS	38
		BAGGAGE DOOR LATCH ASSY	36
		BAGGAGE DOOR LATCH ASSY	37
		BAGGAGE DOOR SCUFF PLATE	64
		BAGGAGE DOOR SCUFF PLATE	65
		BAGGAGE DOOR WINDLACE	64
		BAGGAGE DOOR WINDLACE	65
		BAGGAGE NACELLE CARPET	67
		BAGGAGE SHELF PLACARD ASSY	1
		BALANCE WEIGHT-PUDDER	60
		BALANCE WEIGHTS-AILERON	58
		BALANCE WEIGHTS-ELEVATOR	62
		BAR TOW	63
		BATTERY	187
		BATTERY BOX	56
		BATTERY BOX COVER	56
		BATTERY BOX COVER PLACARD	56
		BATTERY CABLES	187
		BEACON INSTL-LOCATOR	201
		BEARING-MAIN GEAR IDLER BELLCRANK	45
		BELLCRANK STEERING	95
		BELLCRANKS-FLAP CONTROL	120
		BLADE ASSY-PROP	143
		BLADE ASSY-PROP	144
		BOOM MIKE INSTALLATION	63
		BOOT ASSY-NOSE GEAR ACTUATOR ROD	4
		BCCT-CONTROL COLUMN	67
		BCCT-PROP DEICE	145
		BOOTS-SURFACE DEICE	170
		BOTTOM ASSY-AFT SECTION	29
		BOTTOM ASSY-AFT SECTION	30
		BOX ASSY-GLOVE	95
		BOX ASSYS-JUNCTION	195
		BOX-ELECTRICAL	96
		BRACKET ASSYS-INSTRUMENT PANEL	7
		BRACKET ASSEMBLIES-CONTROL SUPPORT	20
		BRACKET ASSY-BOB WEIGHT BELLCRANK	4
		BRACKET ASSY-BOB WEIGHT BUMPER	4
		BRACKET ASSY-DOOR LATCH	9
		BRACKET ASSY-DOOR LATCH	10
		BRACKET ASSY-PARKING BRAKE PULLEY	4
		BRACKET ASSY-SHOULDER HARNESS	2
		BRACKET ASSY-SHOULDER HARNESS	9
		BRACKET ASSY-SHOULDER HARNESS	10

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
B		C	
BRACKET ASSY-SPEAKER MOUNTING	9	CABIN LIGHT BRACKET	189
BRACKET ASSY-SPEAKER MOUNTING	10	CABIN LIGHT BRACKET	190
BRACKET-CABIN LIGHT	189	CABIN SECTION STRUCTURE ASSY	7
BRACKET-COMPASS TRANS	181	CABIN SIDE BULKHEADS	11
BRACKET-GEAR WARNING SWITCH	13	CABIN SIDE SKINS	11
BRACKET-MAIN GEAR DOOR HINGE	106	CABIN SIDE STRINGERS	11
BRACKET-MICROPHONE	63	CABIN SIDE STRUCTURE ASSY	11
BRACKET-THERMOSTAT CONTROL	4	CABIN STEREO COMPONENTS	182
BRACKETS-CONTROL SUPPORT	4	CABIN STEP INSTL	38
BRACKETS-CONTROL PULLEY	48	CABIN TOP SECTION BULKHEADS	9
BRACKETS-ENGINE MOUNT	43	CABIN TOP SECTION BULKHEADS	10
BRACKETS-FLIGHT CONTROLS	49	CABIN TOP SECTION BULKHEADS	9
BRACKETS-FLIGHT CONTROLS	16	CABIN TOP SECTION SKINS	9
BRACKETS-FRONT SEAT SUPPORT	31	CABIN TOP SECTION SKINS	10
BRACKETS-FUEL SELECTOR CONTROL	163	CABIN TOP SECTION STRINGERS	10
BRACKETS-FUEL SELECTOR CONTROL	163	CABIN TOP SECTION STRINGERS	10
BRACKETS-FUEL SELECTOR VALVE	163	CABIN TOP SECTION STRUCTURE ASSY	9
BRACKETS-GEAR DOOR HINGE	41	CABIN TOP SECTION STRUCTURE ASSY	10
BRAKE AND RUDDER PEDALS	109	CABIN VENT AIR SPILL	170
BRAKE CYLINDER-WHEEL HALF	92	CABIN WINDOW CURTAIN ASSY	66
BRAKE CYLINDER SUPPORTS	20	CABLE ASSY-STEP RETRACTION	38
BRAKE DISCS	95	CABLES-BATTERY	187
BRAKE MASTER CYLINDER	122	CABLES-RUDDER AND NOSE WHEEL STEERING CONTR	108
BRAKE SYSTEM	122	CAP ASSY-NOSE	3
BRAKE-LINING	93	CAP-CIL	128
BRAKE-MAIN GEAR	93	CARPET INSTL	67
BREAKER PANEL INSTL-CIRCUIT	183	CARPET-BAGGAGE NACELLE	67
BREAKER PANEL INSTL-CIRCUIT	184	CARPET-CABIN	67
BREATHER LINE-ENGINE	126	CARPET-CABIN FLOOR	67
BREATHER LINE-ENGINE	128	CASE-LUGGAGE TIE DOWN	63
BREATHER SEPARATOR	128	CASE-LUGGAGE TIE DOWN	63
BULB-OUTSIDE AIR TEMP	175	CASE-OXYGEN MASK	63
BULKHEAD & FILLET ASSY-SPINNER DOME	142	CHAIN GUARD-PILOT SEAT	105
BULKHEAD ASSY-NOSE	5	CHAIN-KEY	63
BULKHEAD ASSYS-CABIN BOTTOM SECTION	8	CHANNEL ASSEMBLIES-CABIN BOTTOM SECTION	8
BULKHEAD ASSYS-FUSELAGE STA 00.00	4	CHANNELS-DOOR JAMB	11
BULKHEAD ASSYS-FUSELAGE STA 109.375	18	CHECK LIST-PILOTS	63
BULKHEAD ASSYS-FUSELAGE STA 109.375	19	CIGAR LIGHTER ASSY	181
BULKHEAD ASSYS-FUSELAGE STA 20	17	CIGAR LIGHTER PAN	66
BULKHEAD ASSYS-TAILCONE	31	CIGAR LIGHTER RESISTOR	181
BULKHEAD HALF ASSY-SPINNER DOME	142	CIGAR LIGHTER TRIM	66
BULKHEADS-AFT SECTION	25	CIRCUIT BREAKER PANEL	183
BULKHEADS-AFT SECTION	26	CIRCUIT BREAKER PANEL	184
BULKHEADS-AFT SECTION	27	CIRCUIT BREAKER PANEL	185
BULKHEADS-AFT SECTION	28	CIRCUIT BREAKER LIGHTING & SILKSCREENS	193
BULKHEADS-AFT SECTION BOTTOM	29	CIRCUIT BREAKER LIGHTING & SILKSCREENS	194
BULKHEADS-AFT SECTION BOTTOM	30	CIRCUIT BREAKER-ALTERNATORS	183
BULKHEADS-CABIN SIDE	11	CIRCUIT BREAKERS	183
BULKHEADS-CABIN TOP SECTION	9	CLOCK	88
BULKHEADS-CABIN TOP SECTION	10	CLOCK	89
BULKHEADS-NACELLE BAGGAGE COMPARTMENT	54	COAT HANGER	66
BULKHEADS-NOSE SECTION	3	COLLAR ASSY-PILOT TUBE SUPPORT	3
BULKHEADS-REAR SPAR	16	COLUMN-CONTROL	111
BUMPER-MAIN GEAR DOOR	106	COMPASS CARD RETAINER	66
BUMPER-TAILCONE	31	COMPASS TRANS BRACKET	181
		COMPONENTS-ENGINE ASSY AND ACCESSORIES INST	125
		CONSOLE ASSY-OVERHEAD	189
		CONSOLE ASSY-OVERHEAD	190
		CONTROL ASSY-PROP SYNC	181
		CONTROL CABLE SEAL AND RETAINER ASSYS	11
		CONTROL CABLE-FUEL SELECTOR	163
		CONTROL COLUMN	111
		CONTROL COLUMN BOOT	67
		CONTROL COLUMN COVER ASSY	147
		CONTROL LEVERS-ENGINE	67
		CONTROL LOCK	140
		CONTROL PEDESTAL STRUCTURE	63
		CONTROL PULLEY BRACKETS	13
		CONTROL QUADRANT INSTL-ENGINE	43
		CONTROL QUADRANT KNOBS	141
		CONTROL QUADRANT LEVER	141
		CONTROL SUPPORT BRACKET ASSEMBLIES	20
		CONTROL SUPPORT BRACKETS	48
		CONTROL SYSTEM-AILERON	110
		CONTROL SYSTEM-AILERON TRIM	116
		CONTROL SYSTEM-ELEVATOR TRIM	111
		CONTROL SYSTEM-ELEVATOR TRIM	117
		CONTROL SYSTEM-ENGINE	140
		CONTROL SYSTEM-FLAP	120
		CONTROL SYSTEM-RUDDER TRIM	115
		CONTROL WHEEL	113
		CONTROL WHEEL	114
		CONTROL WHEEL PLACARD	1
		CONTROL-ALTERNATE AIR	140
		CONTROL ALTITUDE	207
		CONTROL-CABIN AIR	85
		CONTROL-CABIN AIR	86
		CONTROL-CABIN HEAT	170
		CONTROL-DEFROST	85
		CONTROL-DEFROST	86
		CONTROL-MIXTURE	135
		CONTROL-OXYGEN	85
C			
CABIN AIR CONTROL	83		
CABIN AIR WEMAC	81		
CABIN AIR WEMACS	170		
CABIN BOTTOM SECTION BULKHEAD ASSYS	8		
CABIN BOTTOM SECTION SKINS AND STRINGERS	8		
CABIN BOTTOM SECTION STRUCTURE ASSY	8		
CABIN CARPET	67		
CABIN DOOR	33		
CABIN DOOR HINGE HALF	7		
CABIN DOOR LATCH ASSYS	35		
CABIN DOOR LATCH SYSTEM	34		
CABIN DOOR WINDLACE ASSY	64		
CABIN EQUIPMENT AND FURNISHINGS	63		
CABIN EXHAUST MUFFLER ASSY	170		
CABIN FLOOR CARPET	67		
CABIN HEAT & VENT DUCTS	170		
CABIN HEAT & VENT GRILL	170		
CABIN HEAT & VENT SYSTEM	170		
CABIN HEAT CONTROL	83		
CABIN HEAT CONTROL VALVE & ROD ASSY	170		
CABIN HEAT OUTLETS	170		
CABIN HEATER	171		
CABIN HEATER AIR INLET	171		
CABIN HEATER HOSE	171		
CABIN HEATER LINES	171		
CABIN HEATER STRAPS	171		
CABIN LIGHT & PLATE ASSY	189		
CABINLIGHT & PLATE ASSY	190		

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
C		D	
CONTROL-OXYGEN	86	DOORWELL ASSY-NOSE ACCESS	3
CCNTRCL-PRCP	140	DORSAL STRUCTURE	59
CONTRCL-TEMPERATURE	85	DRAIN HOSE-MANIFOLD	126
CONTRCL-TEMPERATURE	86	DRAIN VALVE-AUX FUEL	158
CGNTRCL-THROTTLE	140	DRAIN VALVE-AUX FUEL	159
CCNTRCLS-HEATED WINDSHIELD	181	DUCTS-CABIN HEAT & VENT	170
CCNTRCLS-RHEOSTAT	189		
CCNTRCLS-RHEOSTAT	190	E	
COVER ASSY-CONTROL COLUMN	67	ELECTRIC SEAT PLACARD	1
COVER ASSY-HAT SHELF	64	ELECTRIC TRIM DRIVE INSTL	118
COVER ASSY-WIRE TUNNEL	66	ELECTRICAL EQUIPMENT INSTALLATION	181
COVER PLATES-FLOORBOARD	21	ELECTRICAL SWITCHES INSTL	186
COVER PLATES-RUDDER PEDAL	67	ELECTRONIC EQUIPMENT	197
COVER PLATES-WHEEL WELL	39	ELEMENT-ENGINE OIL FILTER	128
COVER-BATTERY BOX	56	ELEVATOR BALANCE WEIGHTS	62
COVER-INSTRUMENT PANEL DECK	64	ELEVATOR BELLCRANK ASSY	62
COVER-PEDESTAL QUADRANT	13	ELEVATOR CCNTRCL SYSTEM	111
COVERS-JUNCTION BOX	195	ELEVATOR HCRN ASSY	62
COVERS-PEDESTAL FRONT AND SIDE	13	ELEVATOR RIBS	62
COWL BAFFLE ASSYS	123	ELEVATOR SKINS	62
CGWL HINGES	123	ELEVATOR SPARS	62
COWL NOSE CAP ASSY	123	ELEVATOR STRUCTURE	62
COWL PANEL ASSYS	123	ELEVATOR TIP ASSY	62
COWL-ENGINE	123	ELEVATOR TRIM CONTROL SYSTEM	117
COWL-ENGINE TURBOCHARGED	124	ELEVATOR TRIM TAB	62
CRANK-MANUAL GEAR EXTENSION	105	ELEVATOR TRIM TAB ACTUATOR ASSY	119
CROSS FEED LINE DRAIN PLACARD	1	ELEVATOR TRIM WHEEL PLACARD	1
CURTAIN ASSY-CABIN WINDOW	66	EMBLEM PLACARD	1
CURTAIN ASSY-DIVIDER	66	EMERGENCY EXIT WINDOW	23
CYLINDER & REGULATOR-OXYGEN	173	EMERGENCY EXTENSION-GEAR MANUAL	105
CYLINDER AND TRUNION ASSY-MAIN GEAR STRUT	93	EMERGENCY WINDOW PLACARD	1
CYLINDER ASSY-FEATHERING	143	EMERGENCY WINDOW RETAINER ASSYS	1
CYLINDER ASSY-FEATHERING	144	ENGINE ALTERNATOR	130
CYLINDER-BRAKE	120	ENGINE ALTERNATOR-TURBOCHARGED	131
		ENGINE INSTL	126
D		ENGINE INSTL-TURBOCHARGED	127
DAMPENER INSTALLATION-YAW	217	ENGINE ASSY AND ACCESSORIES INSTL	128
DEICE BOOTS	176	ENGINE ASSY AND ACCESSORIES INSTL-TURBOCHARG	129
DEICE BOOTS TURBO SYSTEM	178	ENGINE BAFFLES INSTL	134
DEICE COMPONENTS-PROP	145	ENGINE BAFFLES INSTL-TURBOCHARGED	135
DEICE COMPONENTS-PROP	146	ENGINE BREATHER LINE	126
DEICE HOSES	176	ENGINE BREATHER LINE TURBOCHARGED	127
DEICE HOSES TURBO SYSTEM	178	ENGINE BREATHER LINE	129
DEICE LINES	176	ENGINE BREATHER LINE TURBOCHARGED	129
DEICE LINES TURBO SYSTEM	178	ENGINE COMPARTMENT DEICE	179
DEICE PRESSURE SWITCH	176	ENGINE COMPARTMENT DEICE TURBO SYSTEM	180
DEICE PRESSURE SWITCH TURBO SYSTEM	178	ENGINE COMPARTMENT DEICE FILTER	179
DEICE SYSTEM SURFACE	176	ENGINE COMPARTMENT DEICE FILTER TURBO SYSTEM	180
DEICE SYSTEM SURFACE TURBO SYSTEM	178	ENGINE COMPARTMENT DEICE HOSES	179
DEICE-ENGINE COMPARTMENT	179	ENGINE COMPARTMENT DEICE HOSES TURBO SYST	180
DEICE-ENGINE COMPARTMENT TURBOCHARGED	180	ENGINE COMPARTMENT DEICE LINES	179
DETECTOR-FLUX	181	ENGINE COMPARTMENT DEICE LINES TURBO SYST	180
DIPSTICK-CIL	128	ENGINE COMPARTMENT DEICE MANIFOLD	179
DISCS-BRAKE	93	ENGINE COMPARTMENT DEICE MANIFOLD TURBO S	180
DIVIDER CURTAIN ASSY	66	ENGINE COMPARTMENT DEICE OIL SEPARATOR	179
DCME-SPINNER	142	ENGINE COMPARTMENT DEICE OVERBOARD VENTS	179
DOOR ASSY-FUEL STRAINER	49	ENGINE COMPARTMENT DEICE OVERBOARD VENTS	180
DOOR ASSY-GROUND SERVICE PLUG	41	ENGINE COMPARTMENT DEICE RELIEF VALVE	179
DOOR ASSY-GROUND SERVICE PLUG-TURBO SYSTEM	42	ENGINE COMPARTMENT DEICE RELIEF VALVE TUR	180
DOOR ASSY-NACELLE BAGGAGE COMPARTMENT	54	ENGINE COMPARTMENT DEICE SHUTTLE VALVE	179
DOOR ASSY-NACELLE BAGGAGE COMPARTMENT	55	ENGINE COMPARTMENT DEICE SHUTTLE VALVE TU	180
DOOR ASSY-NOSE ACCESS	3	ENGINE COMPARTMENT FIRE EXTINGUISHER	138
DOOR HINGE-MAIN GEAR	106	ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS	155
DOOR JAMB ASSY-UPPER	9	ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS-TU	156
DOOR JAMB CHANNELS	11	ENGINE CONTROL LEVERS	140
DOOR JAMBS-BAGGAGE	25	ENGINE CONTROL QUADRANT INSTL	141
DOOR JAMBS-BAGGAGE	26	ENGINE CONTROL SYSTEM	140
DOOR JAMBS-BAGGAGE	27	ENGINE COWL	123
DOOR JAMBS-BAGGAGE	27	ENGINE COWL-TURBOCHARGED	124
DOOR JAMBS-BAGGAGE	28	ENGINE EXHAUST SYSTEM INSTL	132
DOOR LATCH BRACKET ASSY	10	ENGINE EXHAUST SYSTEM INSTL-TURBOCHARGED	133
DOOR LATCH BRACKET ASSY	34	ENGINE FUEL SYSTEM HOSE	135
DOOR LATCH SYSTEM-CABIN	66	ENGINE FUEL SYSTEM LINES	155
DCCR POST TRIM	36	ENGINE GASKETS	128
DOOR STOP STRAP ASSY	36	ENGINE GRCOND STRAP	126
DOOR STOP STRAP ASSY	37	ENGINE HOSES	128
DOOR STOP-NACELLE BAGGAGE DOOR	54	ENGINE HOSES-TURBOCHARGED	129
DOOR STOP-NACELLE BAGGAGE DOOR	55	ENGINE INSTRUMENT LIGHTS RHEOSTATS	85
DOOR-BAGGAGE	36	ENGINE LIFTING EYE BOLT	63
DOOR-BAGGAGE	37	ENGINE MCUNT BRACKETS	49
DCOR-CABIN	33	ENGINE NACELLE STRUCTURE	49
DCOR-OIL FILLER	123	ENGINE OIL FILTER	125
DCORBUMPER-MAIN GEAR	106	ENGINE OIL FILTER ELEMENT	125
DOORS-MAIN GEAR	106		
DOORS-NOSE GEAR	107		

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
H		I	
HANGER-COAT	66	INDICATOR-VERTICAL SPEED	88
HAT SHELF ASSY	226	INDICATOR-VERTICAL SPEED	89
HAT SHELF ASSY	227	INDUCTION & COOLING AIR INSTL	136
HAT SHELF ASSY	228	INDUCTION & COOLING AIR INSTL-TURBOCHARGED	137
HAT SHELF ASSY	64	INDUCTION AIR CANNISTER INSTL	136
HAT SHELF COVER ASSY	64	INLET ASSY-HEATER AIR	3
HAT SHELF COVER ASSY	64	INSPECTION PLATE	3
HEADLINER	65	INSPECTION PLATES	3
HEADLINER	65	INSTRUMENT LIGHTING FIXTURE ASSYS	191
HEAT CONTRL VALVES	170	INSTRUMENT PANEL BRACE ASSYS	7
HEAT CONTROL-CABIN	170	INSTRUMENT PANEL DECK COVER	64
HEAT OUTLETS-CABIN	170	INSTRUMENT PANEL DECK COVER	65
HEAT SHIELDS-EXHAUST	51	INSTRUMENT PANEL EQUIPMENT INSTL	85
HEATED WINDSHIELD CONTROLS	181	INSTRUMENT PANEL EQUIPMENT INSTL	86
HEATER AIR INLET ASSY	3	INSTRUMENT PANEL GLARE SHIELD	86
HEATER ARM	4	INSTRUMENT PANEL INDICATOR LIGHTS	85
HEATER FUEL FILTER ASSY	154	INSTRUMENT PANEL INDICATOR LIGHTS	86
HEATER FUEL LINES	154	INSTRUMENT PANEL LAMPS	189
HEATER FUEL PUMP ASSY	154	INSTRUMENT PANEL STRUCTURE-STATIONARY	12
HEATER FUEL PUMP CONTROL RELAY	187	INSTRUMENT PANEL SWITCHES	87
HEATER FUEL REGULATOR & VALVE ASSY	154	INSTRUMENT PANEL-FLIGHT	89
HEATER FUEL SYSTEM	154	INSTRUMENT PANEL-SHOCK MOUNTED	88
HEATER OPERATION PLACARD	1	INTEGRATED FLIGHT CONTROL SYSTEM	216
HEATER OVERHEAT PLACARD	3		
HEATER SUPPORT	4		
HEATER SUPPORT ASSY	4		
HEATER THERMOSTAT	181		
HEATER-CABIN	171		
HINGE ASSY-BAGGAGE DOOR	36		
HINGE ASSYS-NOSE GEAR DOOR	107		
HINGE ASSYS-VERTICAL STABILIZER	59		
HINGE BRACKET-MAIN GEAR DOOR	106		
HINGE BRACKETS-GEAR DOOR	41		
HINGE HALF-CABIN DOOR	7		
HINGE-AILERON	47		
HINGE-CABIN DOOR	33		
HINGE-MAIN GEAR DOOR	106		
HINGES-CCWL	123		
HINGES-RUDDER	60		
HOLDERS-FUSE	181		
HORIZON GYRO	88		
HORN ASSY-ELEVATOR	62		
HOSE-AUX FUEL	158		
HOSE-AUX FUEL	159		
HOSE-AUX FUEL-TURBOCHARGED ENGINE	160		
HOSE-AUX FUEL-TURBOCHARGED ENGINE	161		
HOSE-CABIN HEATER	171		
HOSE-FUEL FLOW SYSTEM	152		
HOSE-FUEL FLOW SYSTEM-TURBOCHARGED ENGINE	151		
HOSE-MANIFOLD DRAIN	126		
HOSE-MANIFOLD DRAIN-TURBOCHARGE ENGINE	127		
HOSES-DEICE SURFACE	176		
HOSES-DEICE SURFACE TURBO SYSTEM	178		
HOSES-ENGINE	128		
HOSES-ENGINE TURBOCHARGE	129		
HOSES-ENGINE COMPARTMENT CEICE	179		
HOSES-ENGINE COMPARTMENT CEICE TURBOCHARG	180		
HOSES-FUEL SYSTEM ENGINE	155		
HOSES-FUEL SYSTEM ENGINE TURBOCHARGED	156		
HOSES-MANIFOLD PRESSURE	167		
HOSES-MANIFOLD PRESSURE TURBOCHARGED ENGI	168		
HOSES-OIL PRESSURE & DILUTION SYSTEM	165		
HOSES-PITCT SYSTEM	169		
HOSES-TURBOCHARGER & CONTROL OIL SYSTEM	164		
HOSES-VACUUM SYSTEM	174		
HOSES-VACUUM SYSTEM	175		
HOUSING ASSY-PARKING BRAKE	125		
HOUSING-STEP	138		
HUB ASSY-FEATHERING	143		
HUB ASSY-FEATHERING	144		
HUB-PROPELLER	143		
HUB-PROPELLER	144		
I		J	
INDICATOR LIGHTS	85	JACK-MICROPHONE	63
INDICATOR LIGHTS-INSTRUMENT PANEL	85	JACKING PLATE	41
INDICATOR SWITCH-NOSE GEAR DOWN	186	JAMB ASSY-UPPER DOOR	9
INDICATOR-AILERON TRIM	116	JAMB ASSY-UPPER DOOR	10
INDICATOR-AIRSPED	88	JUNCTION BOX ASSYS	155
INDICATOR-MIXTURE CONTROL	86	JUNCTION BOX COVERS	195
INDICATOR-MIXTURE CONTROL	86		
INDICATOR-RUDDER TRIM	115		
INDICATOR-TURN & BANK	88		
INDICATOR-TURN & BANK	89		
		K	
		KEY CHAIN	63
		KNOB-FUEL SELECTOR	163
		KNOB-CONTROL QUADRANT	141
		L	
		LAMP-FUEL SELECT VALVE	181
		LANDING GEAR ACTUATOR	104
		LANDING GEAR SYSTEM	91
		LANDING LIGHT ASSY	188
		LATCH ASSY-BAGGAGE DOOR	36
		LATCH ASSY-NACELLE BAGGAGE DOOR	54
		LATCH ASSY-NACELLE BAGGAGE DOOR	55
		LATCH ASSY-CABIN DOOR	35
		LATCH SYSTEM-CABIN DOOR	34
		LEADING EDGE AND FRONT SPAR-WING	45
		LEADING EDGE RIBS	45
		LEADING EDGE SKINS	45
		LEADING EDGE STRINGERS	45
		LEVER-CONTROL QUADRANT	141
		LEVERS-ENGINE CONTROL	140
		LIGHT & PLATE ASSY-CABIN	189
		LIGHT & PLATE ASSY-CABIN	190
		LIGHT ASSY-LANDING	188
		LIGHT ASSY-ROTATING BEACON	188
		LIGHT ASSY-TAIL	188
		LIGHT ASSY-TAXI	188
		LIGHT ASSYS-NAVIGATION	188
		LIGHT CONSOLE SUPPORT ASSY	9
		LIGHT CONSOLE SUPPORT ASSY	10
		LIGHT SWITCH	189
		LIGHT SWITCH	190
		LIGHTER ASSY-CIGAR	181
		LIGHTER-CIGAR	85
		LIGHTING-CIGAR	86
		LIGHTING-CIRCUIT BREAKER PANELS	192
		LIGHTING-CIRCUIT BREAKER PANELS	193
		LIGHTING-CIRCUIT BREAKER PANELS	194
		LIGHTING FIXTURE ASSYS-INSTRUMENT	191
		LIGHTING STRIP ASSY	191

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
L		M	
LIGHTING-EXTERIOR	188	MOTOR-GEAR ACTUATOR	104
LIGHTS-INDICATOR	85	MOUNTING ASSY-VISOR	9
LIGHTS-INDICATOR	86	MOUNTING ASSY-VISOR	10
LINE-ENGINE BREATHER	126	MUFFLER ASSY-CABIN EXHAUST	170
LINE-ENGINE BREATHER	127		
LINE-ENGINE BREATHER	128		
LINE-ENGINE BREATHER	129		
LINES FUEL SYSTEM-ENGINE	155		
LINES FUEL SYSTEM-ENGINE	156		
LINES-AUX FUEL	158		
LINES-AUX FUEL	159		
LINES-AUX FUEL	160		
LINES-AUX FUEL	161		
LINES-CABIN HEATER	171		
LINES-DEICE SURFACE	176		
LINES-DEICE SURFACE	178		
LINES-ENGINE COMPARTMENT DEICE	179		
LINES-ENGINE COMPARTMENT DEICE	180		
LINES-FUEL FLOW SYSTEM	152		
LINES-FUEL FLOW SYSTEM	153		
LINES-FUEL SYSTEM	150		
LINES-FUEL SYSTEM	151		
LINES-HEATER FUEL	154		
LINES-MANIFOLD PRESSURE	167		
LINES-MANIFOLD PRESSURE	168		
LINE-OIL PRESSURE	166		
LINES-OIL PRESSURE & DILUTION	165		
LINES-OXYGEN SYSTEM	173		
LINES-PITOT SYSTEM	169		
LINES-TURBOCHARGER & CONTROL OIL SYSTEM	164		
LINES-VACUUM SYSTEM	174		
LINES-VACUUM SYSTEM	175		
LINES-WING LOCKER FUEL	157		
LINES-WING TIP TANK	162		
LINING-BRAKE	93		
LINK ASSYS-FLAP SCISSORS	120		
LINKAGE-MAIN GEAR DOOR RETRACTION	98		
LINKAGE-MAIN GEAR RETRACTION	98		
LINKAGE-NCSE GEAR RETRACTION	103		
LOCATOR BEACON INSTL	201		
LOCK CONTROL	63		
LOCK-FRONT SEAT	15		
LOWER NACELLE INSTL-TURBO SYSTEM	50		
M		N	
MAA NAMEPLATE	1	NACELLE BAGGAGE COMPARTMENT BULKHEADS	54
MAIN GEAR BRAKE	93	NACELLE BAGGAGE COMPARTMENT DOOR ASSY	54
MAIN GEAR DOOR RETRACTION LINKAGE	98	NACELLE BAGGAGE COMPARTMENT PANELS	54
MAIN GEAR DOORS	106	NACELLE BAGGAGE COMPARTMENT SKINS	54
MAIN GEAR INSTL	92	NACELLE BAGGAGE COMPARTMENT STRUCTURE	54
MAIN GEAR RETRACTION LINKAGE	95	NACELLE BAGGAGE COMPARTMENT STRUCTURE	54
MAIN GEAR RETRACTION PUSH PULL TUBES	97	NACELLE EXHAUST FAIRINGS	54
MAIN GEAR STRUT ASSY	93	NACELLE FILLETS	49
MAIN GEAR STRUT ASSY	94	NACELLE FIREWALL	49
MAIN GEAR STRUT CYLINDER AND TRUNION ASSY	93	NACELLE FORMERS	49
MAIN GEAR STRUT PISTON AND AXLE ASSY	93	NACELLE SKINS	49
MAIN GEAR SUPPORT FORGING	92	NACELLE STRUCTURE-ENGINE	49
MAIN GEAR TIRE	95	NAMEPLATES PLACARDS AND EXTERIOR MARKINGS	1
MAIN GEAR TIRE TUBE	95	NAV-O-MATIC 400 AUTOPILOT SYSTEM	210
MAIN GEAR TORQUE LINKS	93	NAV-O-MATIC 400A AUTOPILOT SYSTEM	206
MAIN GEAR WHEEL	95	NAV-O-MATIC 800 AUTOPILOT SYSTEM	202
MANIFOLD DRAIN HOSE	126	NAVIGATION LIGHT ASSYS	188
MANIFOLD PRESSURE HOSES	167	NOISE SUPPRESSOR	181
MANIFOLD PRESSURE HOSES-TURBOCHARGED ENGINE	168	NOISE ACCESS DOOR ASSY	3
MANIFOLD PRESSURE LINES	167	NOISE ACCESS DOORWELL ASSY	3
MANIFOLD PRESSURE LINES-TURBOCHARGED ENGINE	168	NOISE BULKHEAD ASSY	3
MANIFOLD PRESSURE SYSTEM	168	NOISE CAP ASSY	3
MANIFOLD PRESSURE SYSTEM-TURBOCHARGED ENGINE	168	NOISE CAP ASSY-COWL	123
MANIFOLD-ENGINE COMPARTMENT DEICE	179	NOISE GEAR DOOR HINGE ASSYS	107
MANIFOLD-VACUUM	175	NOISE GEAR DOORS	107
MANUAL EXTENSION-GEAR	105	NOISE GEAR INSTL	99
MANUAL GEAR EXTENSION CRANK	105	NOISE GEAR RETRACTION LINKAGE	103
MAPLIGHT PLACARDS	113	NOISE GEAR SHIMMY CAMPENER	101
MARKER-TAE POSITION	13	NOISE GEAR STRUT ASSY	100
MASKS & LINES-OXYGEN	173	NOISE GEAR TIRE	102
MASTER CYLINDER-BRAKE	122	NOISE GEAR TIRE TUBE	102
METER-SLAVING	88	NOISE GEAR WELL FORMER ASSY	102
MICROPHONE	63	NOISE GEAR WHEEL	102
MICROPHONE-BOOM	63	NOISE RADIC SHELVES	199
MICROPHONE BRACKET	63	NOISE SECTION BULKHEADS	3
MICROPHONE JACK	63	NOISE SECTION SKINS	3
MICROPHONE SWITCH	63	NOISE SECTION STRINGERS	3
MIXTURE CONTROL	113	NOISE SECTION STRUCTURE ASSY-FUSELAGE	3
MIXTURE CONTROL PROBE	140	NOISE WHEEL AND RUDDER STEERING CONTROL SYST	108
	187		
		O	
		OAT GAGE	88
		OAT GAGE	89
		OAT-BULB	181
		OIL CAP	128
		OIL DILUTION PLACARD	1
		OIL DILUTION PRESSURE SWITCH	165
		OIL DILUTION SOLENOID VALVE	150
		OIL DILUTICN SYSTEM-TURBOCHARGED ENGINE	155
		OIL DIPSTICK	128
		OIL FILLER DOOR	123
		OIL FILTER ELEMENT-ENGINE	128
		OIL FILTER-ENGINE	128
		OIL PLACARD	1
		OIL PRESSURE SYSTEM-TURBOCHARGED ENGINE	166
		OIL PUMP	128
		OIL SEPARATOR-ENGINE COMPARTMENT DEICE	179
		OIL SUMP	128
		OIL PRESSURE & DILUTION SYSTEM	165
		OIL PRESSURE & DILUTION SYSTEM HOSES	165
		OIL PRESSURE & DILUTION SYSTEM LINES	165
		OMNI/ILS WITH GLIDE SLOPE	208
		OPERATIONAL LIMITS PLACARD	1
		OUTLETS-OXYGEN	173
		OUTSIDE AIR TEMPERATURE GAGE	89
		OUTSIDE AIR TEMPERATURE GAGE	89
		OUTSIDE TEMP BULB	181
		OVERHEAD CONSOLE ASSY	189
		OVERRIDE SWITCH	113
		OXYGEN CONTROL	85
		OXYGEN CONTROL	86
		OXYGEN CYLINDER & REGULATOR	173

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
O			
OXYGEN MASK CASE	63	PLACARDS-AUTOPILOT	113
OXYGEN MASKS & LINES	173	PLACARDS-MAP LIGHT	113
OXYGEN OUTLET ESCUTCHEON	173	PLACARDS-STATIONARY INSTRUMENT PANEL	12
OXYGEN OUTLETS	173	PLATE ASSY-PROPELLER SYNCHRONIZER	1
OXYGEN PRESSURE GAGE	85	PLATE-ACCESS WING TIP TANKS	162
OXYGEN SYSTEM	173	PLATE-COMPASS TRANS	181
OXYGEN SYSTEM FILLER VALVE	173	PLATE-FINISH & TRIM	1
OXYGEN SYSTEM LINES	173	PLATE-FIREWALL ACCESS	52
P			
PAN ASSYS-TAILCONE	31	PLATE-INSPECTION	2
PAN-CIGAR LIGHTER	66	PLATE-JACKING	41
PANEL ASSEMBLIES-FLOORBOARD	21	PLATE-SWITCH ADAPTER	2
PANEL ASSY-COWL	123	PLATES-INSPECTION	39
PANEL ASSY-SWITCH	191	PLUG BUTTON	189
PANEL ASSY-TRANSISTOR	181	PLUG-SPARK	128
PANEL INSTL-CIRCUIT BREAKER	183	PNEUMATIC SYSTEM	205
PANEL INSTL-CIRCUIT BREAKER	184	PNEUMATIC SYSTEM-FUSELAGE	206
PANEL SHOCK MOUNTS	88	POWER SEAT INSTL PILOT AND CCPILOT	71
PANEL STRUCTURE-STATIONARY INSTRUMENT	12	PRESSURE SWITCH-DEICE	176
PANEL-SHOCKMOUNTED INSTRUMENT	88	PRESSURE SWITCH-FUEL	126
PANEL-SHOCKMOUNTED INSTRUMENT	89	PRESSURE SWITCH-FUEL	157
PANELS-CIRCUIT BREAKER MOUNTING	183	PRESSURE SWITCH-OIL DILUTION	165
PANELS-NACELLE BAGGAGE COMPARTMENT	54	PROBE-MIXTURE CONTROL	187
PANELS-NACELLE BAGGAGE COMPARTMENT	55	PROP CONTROL	140
PANELS-UPHCLSTERY	64	PROP GOVERNOR	128
PANELS-UPHCLSTERY	65	PROPELLER ASSY	142
PARKING BRAKE HANDLE ASSY	122	PROPELLER ASSY	143
PARKING BRAKE HOUSING ASSY	122	PROPELLER ASSY	144
PARKING BRAKE PULLY BRACKET ASSY	4	PROPELLER BLADE ASSY	143
PASSENGER AFT SINGLE SEAT INSTL	83	PROPELLER BLADE ASSY	144
PASSENGER CENTER SINGLE SEAT	80	PROPELLER COUNTERWEIGHT WEIGHT	143
PASSENGER CENTER SINGLE SEAT	81	PROPELLER COUNTERWEIGHT WEIGHT	144
PASSENGER CENTER SINGLE SEAT	82	PROPELLER CEICE BOOT	145
PASSENGER CENTER SINGLE SEAT	82	PROPELLER CEICE COMPONENTS	145
PEDALS BRAKE	109	PROPELLER CEICE COMPONENTS	146
PEDALS-RUDDER	109	PROPELLER CEICE TIMER	181
PEDESTAL FRONT AND SIDE COVERS	13	PROPELLER FEATHERING HUB ASSY	143
PEDESTAL QUADRANT COVER	13	PROPELLER HUB	143
PICTURE WINDOW	24	PROPELLER HUB	144
PILOT AND CCPILOT MANUALLY ADJUSTABLE SEAT	72	PROPELLER SYNCHRONIZER ACTUATOR ASSY	147
PILOT AND CCPILOT MANUALLY ADJUSTABLE SEAT	73	PROPELLER SYNCHRONIZER CONTROL ASSY	181
PILOT AND CCPILOT MANUALLY ADJUSTABLE SEAT	74	PROPELLER SYNCHRONIZER FLEXIBLE SHAFT	147
PILOT AND CCPILOT POWER SEAT INSTL	71	PROPELLER SYNCHRONIZER PLATE ASSY	1
PILOT AND CCPILOT POWER SEAT INSTL	75	PROPELLER UNFEATHERING COMPONENTS	148
PILOT AND CCPILOT POWER SEAT INSTL	76	PROPELLER UNFEATHERING COMPONENTS-TURBOCHARG	149
PILOT AND CCPILOT POWER SEAT INSTL	77	PUMP ASSY-HEATER FUEL	174
PILOT AND CCPILOT SEAT ASSY	69	PUMP-OIL	128
PILOT AND CCPILOT SEAT ASSY	70	PUMP-VACUUM	128
PILOT SEAT CHAIN GUARD	105	PUSH PULL TUBES-MAIN GEAR RETRACTION	97
PILOTS CHECK LIST	63	PUSH PULL TUBES-NOSE GEAR RETRACTION	103
PISTON AND AXLE ASSY-MAIN GEAR STRUT	93	Q	
PITOT MOUNT TUBE	169	QUADRANT COVER-PEDESTAL	13
PITOT STATIC DRAIN VALVE	169	QUADRANT INSTL-ENGINE CONTROL	141
PITOT SYSTEM	169	QUADRANT LEVER-CONTROL	141
PITOT SYSTEM HOSES	169	R	
PITOT SYSTEM LINES	169	RADIO SHELVES-NOSE	199
PITOT SYSTEM SUMP	169	RADIO SHELVES-REAR	200
PITOT TUBE	169	RADAR-AVQ45, AVQ46 & AVQ47	197
PITOT WIRING ASSY	169	REAR SEAT INSTL RECLINING	78
PLACARD ASSY-BAGGAGE SHELF	1	REAR SPAR AND TRAILING EDGE-WING	47
PLACARD-AUXILIARY FUEL CAP	1	REAR SPAR BULKHEADS	16
PLACARD-BATTERY BOX COVER	56	REAR SPAR-FUSELAGE	16
PLACARD-CENTRAL WHEEL	1	RECEIVER-ASH	66
PLACARD-CROSS FEED LINE DRAIN	1	RECLINING ADJUSTMENT MECHANISM INSTL	79
PLACARD-ELECTRIC SEAT	1	RECLINING REAR SEAT INSTL	78
PLACARD-ELEVATOR TRIM WHEEL	1	REDUCTION UNIT-FLAP ACTUATOR	121
PLACARD-ELEM	1	REDUCTION UNIT-GEAR ACTUATOR	104
PLACARD-EMERGENCY WINDOW	1	REGULATOR & VALVE ASSY-HEATER FUEL	174
PLACARD-ENGINE OIL	1	REGULATOR VALVE-VACUUM SYSTEM	181
PLACARD-FUEL WEATHER WINDOW	1	REGULATOR-VOLTAGE	181
PLACARD-FUEL AND GEAR	1	RELAY-AUXILIARY PUMP	187
PLACARD-FUEL CAP	1	RELAY-HEATER FUEL PUMP CONTROL	187
PLACARD-FUEL STRAINER	1	RELAYS	181
PLACARD-FUEL TANK SUMP	1	RELEASE-EMERGENCY WINDOW	23
PLACARD-HEATER OPERATION	1	RESISTOR-CIGAR LIGHTER	181
PLACARD-HEATER OVERHEAT	1	RESISTORS	187
PLACARD-OIL	1	RETAINER ASSYS-EMERGENCY WINDOW	11
PLACARD-OIL DILUTION	1		
PLACARD-OPERATIONAL LIMITS	1		
PLACARD-RUDDER BALANCE	60		
PLACARD-STALL SPEED LIMITS	1		
PLACARD-STATIC DRAIN	169		
PLACARD-WINTERIZATION	1		
PLACARDS AND EXTERIOR MARKINGS-NAMEPLATES	1		

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
R		S	
RETRACTION LINKAGE-MAIN GEAR	97	SKINS-AFT SECTION BOTTOM	29
RETRACTION LINKAGE-MAIN GEAR DOOR	98	SKINS-AFT SECTION BOTTOM	30
RETRACTION LINKAGE-NOSE GEAR	103	SKINS-AILERON	58
RETRACTION PUSH PULL TUBES-MAIN GEAR	97	SKINS-CABIN BOTTOM SECTION	8
RETRACTION PUSH PULL TUBES-NOSE GEAR	103	SKINS-CABIN DOOR	33
RHEOSTAT CCNTRLS	189	SKINS-CABIN SIDE	11
RHEOSTAT CCNTRLS	190	SKINS-CABIN TOP SECTION	9
RIBS-AILERON	58	SKINS-ELEVATOR	62
RIBS-ELEVATOR	62	SKINS-FLAP	57
RIBS-FLAP	57	SKINS-LEADING EDGE	45
RIBS-LEADING EDGE	45	SKINS-NACELLE	49
RIBS-RUDDER	60	SKINS-NACELLE BAGGAGE COMPARTMENT	54
RIBS-STABILIZER	61	SKINS-NOSE SECTION	3
RIBS-TRAILING EDGE	47	SKINS-RUDDER	60
RIBS-VERTICAL STABILIZER	59	SKINS-STABILIZER	61
RIBS-WING INTERSPAR	43	SKINS-STABILIZING EDGE	47
ROTATING BEACON LIGHT ASSY	188	SKINS-VERTICAL STABILIZER	59
RUDDER AND BRAKE PEDALS	109	SKINS-WING INTERSPAR	44
RUDDER AND NOSE WHEEL STEERING CONTROL CABL	108	SLAVING METER	88
RUDDER AND NOSE WHEEL STEERING CONTROL SYST	108	SLAVING METER	89
RUDDER BALANCE PLACARD	60	SOLENOID VALVE-OIL DILUTION	151
RUDDER BALANCE WEIGHT	60	SPAR ASSYS-WING	41
RUDDER HINGES	60	SPAR FITTINGS-WING LEADING EDGE	45
RUDDER PECAL COVER PLATES	67	SPAR-AILERON	58
RUDDER RIBS	60	SPAR-RUDDER	60
RUDDER SKINS	60	SPARK PLUG	128
RUDDER SPAR	60	SPARS-ELEVATOR	62
RUDDER STRUCTURE	60	SPARS-STABILIZER	61
RUDDER TIP ASSY	60	SPEAKER MOUNTING BRACKET ASSY	9
RUDDER TRIM CONTROL SYSTEM	112	SPINNER DOME	142
RUDDER TRIM INDICATOR	112	SPINNER DOME BULKHEAD & FILLET ASSY	142
RUDDER TRIM TAB ACTUATOR ASSY	119	SPINNER DOME BULKHEAD HALF ASSY	142
RUDDER TRIM TAB ASSY	60	SPINNER SUPPORT	142
RUDDER TRIM WHEEL ASSY	112	STABILIZER RIBS	61
S		STABILIZER SKINS	61
SAFETY BELT BRACKETS-FRONT SEAT	16	STABILIZER SKINS	61
SCREW DRIVER	63	STABILIZER STRUCTURE	61
SCUFF PLATE-BAGGAGE DOOR	64	STABILIZER TIP	61
SEAL AND RETAINER ASSYS-CONTROL CABLE	11	STALL & GEAR WARNING FLASHER UNIT	181
SEAL CABIN DOOR	33	STALL SPEED LIMITS PLACARD	1
SEAT ASSY PILOT AND COPILOT	69	STALL WARNING UNIT	187
SEAT ASSY PILOT AND COPILOT	70	STARTER	128
SEAT INSTL PILOT AND COPILOT ELECTRICALLY AD	71	STATIC DRAIN PLACARD	129
SEAT INSTL PILOT AND COPILOT ELECTRICALLY AD	75	STEERING BELLCRANK	99
SEAT INSTL PILOT AND COPILOT ELECTRICALLY AD	76	STEERING CONTROL SYSTEM-NOSE WHEEL AND RUDD	108
SEAT INSTL PILOT AND COPILOT ELECTRICALLY AD	77	STEP HOUSING	38
SEAT ASSY-PILOT AND COPILOT MANUALLY ADJUSTE	73	STEP INSTL-CABIN	38
SEAT ASSY-PILOT AND COPILOT MANUALLY ADJUSTE	74	STEP RETRACTION CABLE ASSY	38
SEAT ASSY-PILOT AND COPILOT MANUALLY ADJUSTE	74	STEREO COMPONENTS-CABIN	182
SEAT INSTL CENTER SINGLE-PASSENGER	80	STINGER INSTL	32
SEAT INSTL CENTER SINGLE-PASSENGER	81	STOP STRAP ASSY-CABIN DOOR	33
SEAT INSTL CENTER SINGLE-PASSENGER	82	STRAINER-AUX FUEL	158
SEAT INSTL AFT SINGLE-PASSENGER	78	STRAINER-AUX FUEL	159
SEAT SAFETY BELT BRACKETS-FRCNT	15	STRAP ASSY-DOOR STOP	36
SEAT SUPPRT BRACKETS-FRONT	15	STRAP-ENGINE GROUND	126
SEATING ARRANGEMENTS INSTL	68	STRAPS CABIN HEATER	171
SEPARATOR-BREATHER	125	STRINGERS-AFT SECTION	25
SERVO & CABLES-AUTOPILOT	195	STRINGERS-AFT SECTION BOTTOM	29
SERVO PANEL-AUTOPILOT	157	STRINGERS-CABIN BOTTOM SECTION	8
SHAFT AND ARM ASSY-HEATER Y	4	STRINGERS-CABIN SIDE	11
SHAFT FLEXIBLE PROP SYNC	142	STRINGERS-CABIN TOP SECTION	9
SHELF-TIMER	3	STRINGERS-CABIN TOP SECTION	10
SHELF-ACTUATOR	205	STRINGERS-LEADING EDGE	43
SHELF & CABLES-ACTUATOR	204	STRINGERS-NOSE SECTION	3
SHELVES-NOSE RADIO	199	STRINGERS-TAILCONE	31
SHELVES-REAR RADIO	200	STRINGERS-TRAILING EDGE	47
SHIELD-VOLTAGE REGULATOR SEAT SUPPORT	175	STRINGERS-WING INTERSPAR	44
SHIMMY DAMPENER-NOSE GEAR	99	STRUCTURE ASSY-CABIN BOTTOM SECTION	7
SHOCK MOUNTED INSTRUMENT PANEL	88	STRUCTURE ASSY-CABIN SECTION	8
SHOCK MOUNTS-PANEL	98	STRUCTURE ASSY-CABIN SIDE	9
SHOCK STRUT-NOSE GEAR	123	STRUCTURE ASSY-CABIN SIDE	10
SHOCKMOUNT ENGINE	2	STRUCTURE ASSY-CABIN TOP SECTION	9
SHOULDER HARNESS BRACKET ASSY	72	STRUCTURE ASSY-CABIN TOP SECTION	10
SHOULDER HARNESS ASSY	73	STRUCTURE ASSY-FUSELAGE	2
SHOULDER HARNESS ASSY	74	STRUCTURE ASSY-WING	41
SHOULDER HARNESS ASSY	9	STRUCTURE ASSY-WING TURBO SYSTEM	42
SHOULDER HARNESS BRACKET ASSY	10	STRUCTURE-AILERON	58
SHOULDER HARNESS BRACKET ASSY	10	STRUCTURE-CONTROL PEDESTAL	13
SHROUD-FUEL PUMP	125	STRUCTURE-ELEVATOR	62
SKIN-TAILCONE	25	STRUCTURE-FLAP	57
SKIN-TAILCONE	26	STRUCTURE-FUSELAGE AFT SECTION	25
SKINS-AFT SECTION	27	STRUCTURE-RUDDER	60
SKINS-AFT SECTION	28	STRUCTURE-STABILIZER	61
		STRUCTURE-VERTICAL STABILIZER	59
		STRUT ASSY-CABIN STEP	38
		STRUT ASSY-MAIN GEAR	93
		STRUT ASSY-MAIN GEAR	94
		STRUT ASSY-NOSE GEAR	100
		SUMP PLACARD-FUEL TANK	1
		SUMP-OIL	125


ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
S		T	
SUMP-PITOT SYSTEM	164	TIP ASSY-ELEVATOR	62
SUN VISOR	66	TIP ASSY-RUDDER	60
SUPPORT ASSY-AUTOPILOT	25	TIP ASSY-VERTICAL STABILIZER	59
SUPPORT ASSY-AUTOPILOT	26	TIP-STABILIZER	61
SUPPORT ASSY-HEATER	4	TIRE-MAIN GEAR	95
SUPPORT ASSY-LIGHT CONSOLE	9	TIRE-NOSE GEAR	102
SUPPORT ASSY-LIGHT CONSOLE	10	TOP-FUEL TANK WELL	44
SUPPORT FORGING-MAIN GEAR	92	TORQUE LINKS-MAIN GEAR	93
SUPPORT-HEATER	3	TORQUE TUBE ASSY	60
SUPPORT-SPINNER	142	TOW BAR	63
SUPPRESSOR-NOISE	181	TRACK ASSY-WINDOW CURTAIN	66
SURFACE DEICE SYSTEM	176	TRAILING EDGE RIBS	47
SURFACE DEICE SYSTEM	178	TRAILING EDGE SKINS	47
SWITCH ADAPTER PLATE	2	TRAILING EDGE STRINGERS	47
SWITCH PANEL ASSY	191	TRANS COMPASS PLATE	181
SWITCH-ACTUATOR	121	TRANSISTOR PANEL ASSY	181
SWITCH-FLIGHT HOUR RECORDER	186	TRIM CIGAR LIGHTER	66
SWITCH-FUEL PRESSURE	126	TRIM CONTROL SYSTEM-AILERON	116
SWITCH-GEAR HORN	186	TRIM CONTROL SYSTEM-ELEVATOR	117
SWITCH-LIGHT	189	TRIM CONTROL SYSTEM-RUDDER	115
SWITCH-LIGHT	190	TRIM TAB ACTUATOR ASSYS	119
SWITCH-MICROPHONE	113	TRIM TAB ASSY-AILERON	58
SWITCH-NOSE GEAR DOWN INDICATOR	186	TRIM TAB ASSY-RUDDER	60
SWITCH-OVERRIDE	113	TRIM TAB-ELEVATOR	62
SWITCHES-PRESSURE DEICE	176	TRIM WHEEL PLACARD-ELEVATOR	1
SWITCHES INSTL-ELECTRICAL	186	TRIM WINDOWS	66
SWITCHES INSTRUMENT PANEL	87	TRIM-DOOR POST	66
SWITCHES-LANDING GEAR LIMIT	186	TRIM-WINDSHIELD	66
SYSTEM INSTL-ENGINE EXHAUST	132	TUBE-MAIN GEAR TIRE	66
SYSTEM INSTL-TURBOCHARGED ENGINE EXHAUST	135	TUBE-NOSE GEAR TIRE	102
SYSTEM-AILERON CONTROL	110	TUBE-PITOT	169
SYSTEM-AILERON TRIM CONTROL	116	TUBE-PITOT MOUNT	3
SYSTEM-BRAKE	122	TURBO SYSTEM LOWER NACELLE INSTL	50
SYSTEM-CABIN HEAT & VENT	170	TURBO SYSTEM WING FRONT SPAR & LEADING EDGE	46
SYSTEM-DEICE	176	TURBO SYSTEM WING INSTL	40
SYSTEM-ELEVATOR CONTROL	111	TURBO SYSTEM WING STRUCTURE	42
SYSTEM-ELEVATOR TRIM CONTROL	117	TURBOCHARGED ENGINE ASSY	127
SYSTEM-ENGINE CONTROL	140	TURBOCHARGED ENGINE INSTL	129
SYSTEM-FLAP CONTROL	120	TURBOCHARGED ENGINE MANIFOLD PRESSURE SYSTEM	168
SYSTEM-FUEL	150	TURBOCHARGED ENGINE OIL DILUTION SYSTEM	155
SYSTEM-FUEL TURBOCHARGED ENGINE	151	TURBOCHARGED INDUCTION & COOLING AIR INSTL	137
SYSTEM-FUEL FLOW	152	TURBOCHARGER & CONTROL OIL SYSTEM	164
SYSTEM-FUEL FLOW TURBOCHARGED ENGINE	153		
SYSTEM-HEATER FUEL	154		
SYSTEM-INTEGRATED FLIGHT CONTROL	216		
SYSTEM-LANDING GEAR	187		
SYSTEM-MANIFOLD PRESSURE	203		
SYSTEM-AUTOPILOT NAV-O-MATIC 400	202		
SYSTEM-AUTOPILOT NAV-O-MATIC 800	202		
SYSTEM-OIL DILUTION TURBOCHARGED ENGINE	155		
SYSTEM-OIL PRESSURE	166		
SYSTEM-GIL PRESSURE & DILUTION	165		
SYSTEM-OXYGEN	173		
SYSTEM-PITOT	169		
SYSTEM-PNEUMATIC	205		
SYSTEM-RUDDER AND NOSE WHEEL STEERING CONTR	108		
SYSTEM-RUDDER TRIM CONTROL	115		
SYSTEM-SURFACE DEICE	176		
SYSTEM-SURFACE DEICE TURBO SYSTEM	178		
SYSTEM-TURBOCHARGER & CONTROL OIL	164		
SYSTEM-VACUUM	174		
SYSTEM-WING LOCKER FUEL	157		
T		U	
TAB ASSY-AILERON TRIM	58	UPHOLSTERY INSTL	64
TAB POSITION MARKER	13	UPHOLSTERY INSTL	65
TACHOMETER GENERATOR	128	UPHOLSTERY PANELS	64
TAIL LIGHT ASSY	188	UPHOLSTERY PANELS	65
TAILCONE BULKHEAD ASSYS	31	UPHOLSTERY TRIM INSTL	66
TAILCONE STRUCTURE ASSY-AFT SECTION	31		
TANK UNIT FUEL GAGE-AUX FUEL	158		
TANK UNIT FUEL GAGE-AUX FUEL	159		
TANK WALL-AFT FUEL	44		
TANKS ASSY-WING TIP	162		
TAXI LIGHT ASSY	188		
TEE ADAPTERS-FRESH AIR	170		
TEMPERATURE BULB-CYLINDER HEAD	187		
TEMPERATURE BULB-OIL	187		
THERMOSTAT-HEATER	181		
THROTTLE CONTROL	140		
TIE DOWN LUGGAGE CASE	63		
TIMER ASSY-WING DEICE	181		
TIMER SHELF	3		
TIMER-PROP DEICE	181		
T		V	
		VACUUM PUMP	128
		VACUUM SYSTEM	174
		VACUUM SYSTEM HOSES	174
		VACUUM SYSTEM HOSES	175
		VACUUM SYSTEM LINES	174
		VACUUM SYSTEM REGULATOR VALVE	174
		VALVE & ROD ASSY-HEAT CONTROL CABIN	170
		VALVE ASSY-HEATER	4
		VALVE-ENGINE COMPARTMENT DEICE RELIEF	179
		VALVE-FUEL SELECTOR	163
		VALVE-REGULATOR VACUUM SYSTEM	174
		VALVE-SHUTTLE ENGINE COMPARTMENT DEICE	179
		VALVE-STATIC DRAIN PITOT	169
		VALVES-HEAT CONTROL	170
		VENT LINES-AUX FUEL	158
		VENTS-OVERBOARD ENGINE COMPARTMENT DEICE	179
		VERTICAL STABILIZER HINGE ASSYS	59
		VERTICAL STABILIZER RIBS	59
		VERTICAL STABILIZER SKINS	59
		VERTICAL STABILIZER STRUCTURE	59
		VERTICAL STABILIZER TIP ASSY	59
		VIBRATOR	181
		VISOR MOUNTING ASSY	6
		VISOR MOUNTING ASSY	10
		VOLTAGE REGULATOR	181
		VOLTAGE REGULATOR SEAT SUPPORT SHIELD	181

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
W			
WATER SHIELD-RELAY	187		
WEIGHT-COUNTERWEIGHT PROP	143		
WEIGHT-COUNTERWEIGHT PROP	144		
WEIGHT-RUDDER BALANCE	60		
WEIGHTS-AILERON BALANCE	58		
WEIGHTS-ELEVATOR BALANCE	62		
WEMACS-CABIN AIR	170		
WHEEL ASSY-RUDDER TRIM	115		
WHEEL MAIN GEAR	95		
WHEEL WELL COVER PLATES	39		
WHEEL-AILERON TRIM	116		
WHEEL-CONTROL	113		
WHEEL-CONTROL	114		
WHEEL-NOSE GEAR	102		
WICK-DISCHARGE	58		
WICK-DISCHARGE	60		
WINDLACE ASSY-CABIN DOOR	64		
WINDLACE ASSY-CABIN DOOR	65		
WINDLACE-BAGGAGE DOOR	64		
WINDLACE-BAGGAGE DOOR	65		
WINDOW CURTAIN TRACK ASSY	66		
WINDCW TRIM	66		
WINDCW-CABIN DOOR	33		
WINDOW-EMERGENCY EXIT	23		
WINDOW-FOUL WEATHER	23		
WINDCW-PICTURE	24		
WINDOWS-CABIN	23		
WINDSHIELD ANTI-ICE SYSTEM-ALCOHOL	177		
WINDSHIELD TRIM	66		
WINDSHIELD FORMER ASSY	9		
WINDSHIELD FORMER ASSY	10		
WINDSHIELD-CABIN	22		
WING DEICE TIMER ASSY	181		
WING FILLETS	39		
WING FRONT SPAR AND LEADING EDGE	45		
WING FRONT SPAR & LEADING EDGE-TURBO SYSTEM	46		
WING INSTL	39		
WING INSTL-TURBO SYSTEM	40		
WING INTERSPAR RIBS	43		
WING INTERSPAR SKINS	44		
WING INTERSPAR STRINGERS	44		
WING LOCKER FUEL	157		
WING REAR SPAR AND TRAILING EDGE	47		
WING SPAR ASSYS	41		
WING STRUCTURE ASSY	41		
WING STRUCTURE ASSY-TURBO SYSTEM	42		
WING TIP TANKS ACCESS PLATE	162		
WING TIP TANKS ASSY	162		
WING TIP TANKS FAIRING ASSYS	162		
WING TIP TANKS FUEL BOOST PUMP	162		
WING TIP TANKS FUEL GAGE	162		
WING TIP TANKS LINES	162		
WINTERIZATION PLACARD	1		
WIRE TUNNEL COVER ASSY	66		
Y			
YAW DAMPENER INSTALLATION	217		

Section
I

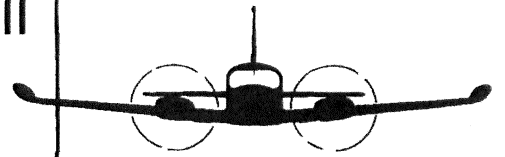

INTRODUCTION